

SET-UP INSTRUCTIONS

Step #1: Location



Select a level, clear area to place the unit and remove any objects or hazards.

Step #2: Tarp



Lay out the tarp and temporarily secure the corners with stakes or weights.

Step #3: Unload



Center unit at back of tarp with the blower tubes facing the rear. Remove the straps.

Step #4: Unroll



Slowly unroll the inflatable unit checking for any damage during the process.

Step #5: Unfold




Unfold the inflatable as flat as possible and continue to check for any damage.

Step #6: Anchor the Unit



Secure each anchor point. Stakes should be angled approximately 15° away from unit.

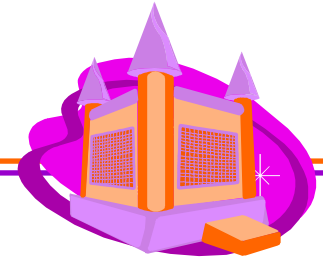

SET-UP INSTRUCTIONS

Step #7: Stakes



Drive stakes all the way into the ground.

Step #8: Blower Tube



Fold the secondary blower tube on top of itself, and then fold in half.

Step #9: Blower Tube (cont...)



Tighten the cinch strap to close the tube. Lay the tube flat and straight.

Step #10: Blower Unit



Place an ample amount of the primary blower tube over the blower unit neck.

Step #11: Blower Unit (cont...)



Gather excess material from the bottom of the tube and tighten the cinch strap.

Step #12: Safety Check



Ensure the quick release device is closed. Turn on the blower and check connections.